

SPARK PLUGS

(Refer to the maintenance precautions on page 55).



Recommended plugs:

Standard:

DPR9EA-9 (NGK) or
X27EPR-U9 (NIPPONDENSO)

To remove the spark plug:

1. Check that the fuel fill cap is closed.
2. Turn the fuel cock to OFF.
3. Remove the seat (page 36).
4. Remove the fuel tank mount bolts (1).
5. Slide the fuel tank (2) backward.

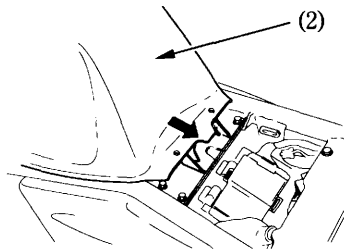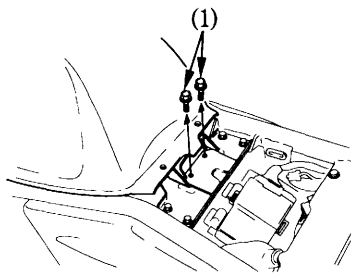

- (1) Mount bolts
(2) Fuel tank