



Stop/Taillight Bulb

1. Remove the four screws (1).
2. Remove the taillight lens (2).

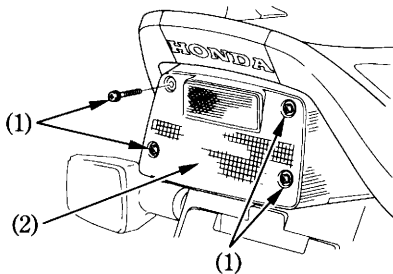

- (1) Screws
(2) Taillight lens

3. Slightly press down on the bulb (3) and turn it counterclockwise.
4. Install a new bulb in the reverse order of removal.

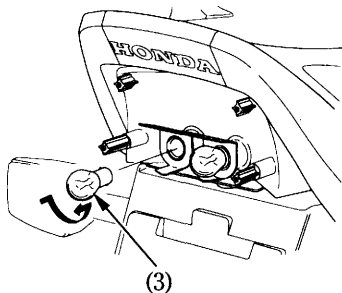

- (3) Bulb