



Adjustment:

1. Major adjustment should be made using the lower adjusting nut (2) at the front wheel.



Minor adjustment can be made with the upper adjusting nut (3) on the brake lever.

Pull back the rubber dust cover (4). Loosen the lock nut (5).

2. Adjust brake lever freeplay with the front brake adjusting nut. Turning the nut clockwise will decrease freeplay and turning the nut counterclockwise will increase freeplay.

Make sure the cut-out on the adjusting nut is seated on the brake arm pin (6) after making final freeplay adjustment.

Tighten the lock nut and install the rubber dust cover.

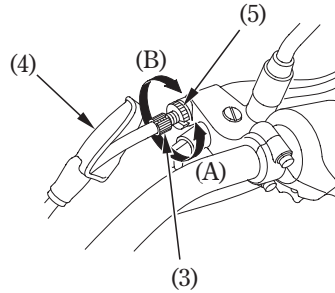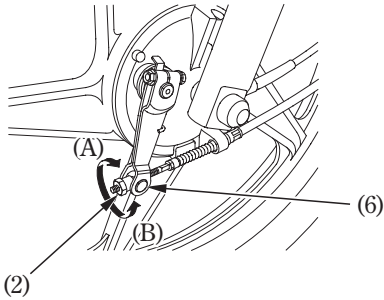

- (2) Lower adjusting nut
- (6) Brake arm pin
- (A) Decrease freeplay
- (B) Increase freeplay

- (3) Upper adjusting nut
- (4) Rubber dust cover
- (5) Lock nut
- (A) Decrease freeplay
- (B) Increase freeplay

