



6. Lights and horn—Check that lights, indicators and horn function properly.
7. (U, IU)
Engine stop switch—Check for proper function (page 43).
8. Side stand ignition cut-off system—Check for proper function (page 92).
9. Wheels and tyres — Check condition, air pressure and adjust if necessary (pages 35 – 39).

