





Rear Wheel Removal

1. Place the motorcycle on its center stand.
2. Remove the rear brake adjusting nut (1).
Disconnect the brake rod (2) from the brake arm (3).

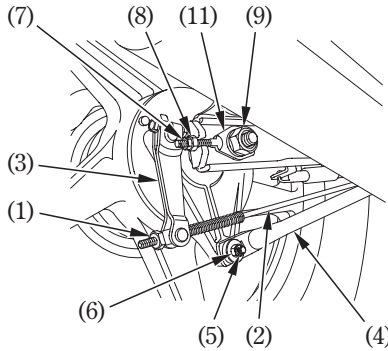

- | | |
|------------------------------|--------------------------------|
| (1) Rear brake adjusting nut | (6) Stopper arm nut |
| (2) Brake rod | (7) Drive chain lock nuts |
| (3) Brake arm | (8) Drive chain adjusting nuts |
| (4) Brake stopper arm | (9) Rear axle nut |
| (5) Cotter pin | |

3. Disconnect the brake stopper arm (4) from the brake panel by removing the cotter pin (5), stopper arm nut (6), washer and rubber grommet.
4. Loosen the drive chain lock nuts (7) and drive chain adjusting nuts (8).
5. Remove the rear axle nut (9).
6. Remove the rear axle shaft (10), drive chain adjusters (11) and side collars, then remove the drive chain (12) from the driven sprocket by pushing the rear wheel forward.
7. Remove the rear wheel from the motorcycle.

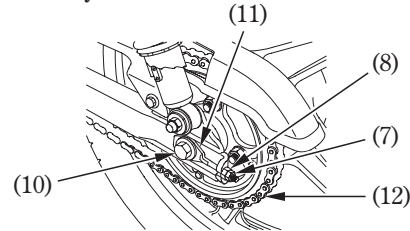

- | | |
|----------------------------|------------------|
| (10) Rear axle shaft | (12) Drive chain |
| (11) Drive chain adjusters | |

