

<b>(Ref.No.) Description</b>	<b>Function</b>
(9) Immobilizer system (HISS) indicator (red)	<p>This indicator lights for a few seconds when the ignition switch is turned ON and the engine stop switch is at <math>\odot</math> (RUN). It will then go off if the properly-coded key has been inserted. If an improperly-coded key has been inserted, the indicator will remain on and the engine will not start (page 67 ).</p> <p>When the blinking function of this indicator is valid and the ignition switch is OFF, it keeps blinking for 24 hours (page 68 ).</p>
(10) Speedometer	Shows riding speed.
(11) PGM-FI indicator (red)	<p>Lights when there is any abnormality in the PGM-FI (Programmed Fuel Injection) system. Should also light for a few seconds and then go off when the ignition switch is turned ON and engine stop switch is at <math>\odot</math> (RUN).</p> <p>If it comes on at any other time , reduce speed and take the motorcycle to your Honda dealer as soon as possible.</p>