


6. Check the spark plug gap (2) using a wire-type feeler gauge. If adjustment is necessary, bend the side electrode (3) carefully.

The gap should be:

0.8–0.9 mm (0.03–0.04 in)

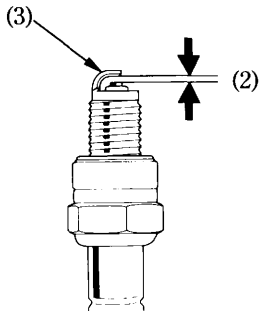

(2) Spark plug gap

(3) Side electrode

7. With the plug washer attached, thread the spark plug in by hand to prevent cross-threading.
8. Tighten the spark plug 1/2 turn with a spark plug wrench to compress the washer.

NOTICE

The spark plug must be securely tightened. An improperly tightened plug can become very hot and possibly damage the engine.

9. Reinstall the spark plug caps.
10. Install the remaining parts in the reverse order of removal.