

FUEL TANK MAINTENANCE POSITION

The front of the fuel tank can be tilted up for the spark plug maintenance.

The fuel tank does not require draining.


To Raise:

1. Place the motorcycle on its side stand with the transmission in neutral and the ignition switch off.

(BR type only)

Place the motorcycle on its center stand with the transmission in neutral and the ignition switch off.

2. Make the handlebar straight.
3. Remove the right and left side covers (page 86).
4. Remove the bolts (1).
5. Pull up the rear end of the fuel tank and release the tank from the cushion rubbers (2) on the frame.

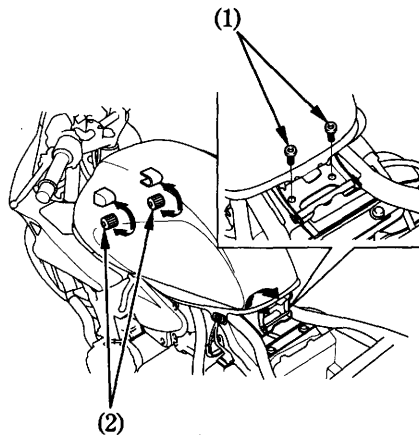

- (1) Bolts
(2) Cushion rubbers