

## TYRES

Proper air pressure will provide maximum stability, riding comfort and tyre life.

Check tyre pressure frequently and adjust if necessary (page 23 ).

### NOTE:

- \* Tyre pressure should be checked before you ride while the tyres are “cold”.
- \* Check the tyres for cuts, embedded nails, or other sharp objects. See your authorized Honda dealer for replacement of damaged tyres or punctured inner tubes.

### ▲ WARNING

- \* **Do not attempt to patch a damaged tyre or inner tube. Wheel balance and tyre reliability may be impaired.**
- \* **Improper tyre inflation will cause abnormal tread wear and create a safety hazard. Underinflation may result in the tyre slipping on, or coming off of the rim causing tyre deflation that may result in a loss of vehicle control.**

### ▲ WARNING

- \* **Operation with excessively worn tyres is hazardous and will adversely affect traction and handling.**
- \* **The use of tyres other than those listed in this manual may adversely affect handling.**

Replace tyres before tread depth at the center of the tyre reaches the following limit:

Minimum recommended tyre center tread depth	
Front	1.5 mm (0.06 in)
Rear	2.0 mm (0.08 in)