


Neutral indicator

Comes on when the transmission is in Neutral.

High beam indicator

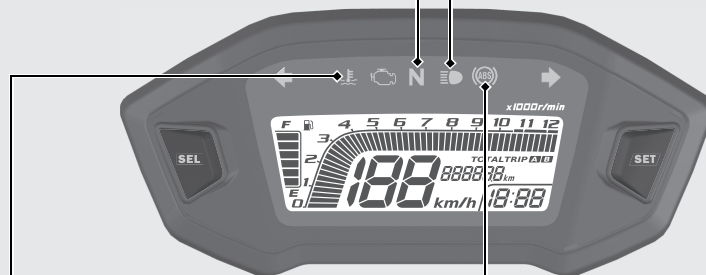

High coolant temperature indicator

Comes on briefly when the ignition switch is turned on.

If it comes on while riding: ➔ P.76

ABS (Anti-lock Brake System) indicator

Comes on when the ignition switch is turned on. Goes off when your speed reaches approximately 10 km/h (6 mph).

If it comes on while riding: ➔ P.77