


Crankcase Breather

Cleaning the Crankcase Breather

Maintenance

1. Remove the crankcase breather tube plug from the tube.
2. Drain deposits into a suitable container.
3. Install the crankcase breather tube plug.

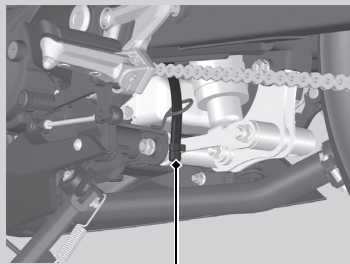

Crankcase breather tube plug