

Tyre Puncture ▶ Removing Wheels

Front Wheel

Removal

1. Park on a firm, level surface.
2. Remove the mounting bolts and remove the brake caliper.
 - ▶ Support the brake caliper assembly so that it doesn't hang from the brake hose. Do not twist the brake hose.
 - ▶ Avoid getting grease, oil, or dirt on the disc or pad surfaces.
 - ▶ Do not pull the brake lever while the brake caliper is removed.
3. Remove the front axle nut.

