


• Headlight Switch (U.K. type)

The headlight switch ③ is located at the right handlebar grip.

When headlight switch ③ is moved to red dot position, headlight goes out.

When the switch is moved to "P" position, position light comes on.

When the switch is moved to "H" position, headlight comes on.

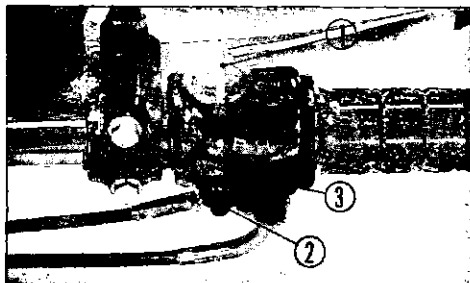

① Ignition switch
② Starter button

③ Headlight switch

• Headlight Replacement (U.K. type)

To remove the headlight bulb for replacement, proceed as follows:

1. Remove the two headlight attaching screws and remove the headlight ① from the headlight case.
2. Remove the headlight socket ② from the headlight.
3. Remove the headlight bulb ③ from the headlight socket.
4. To install, reverse the removal procedures.



① Headlight
② Headlight socket

③ Headlight bulb
④ Position light