


Main Switch

The main switch ① is located on the left side under the forward end of the fuel tank. Functions of the respective switch positions are shown in the chart below.

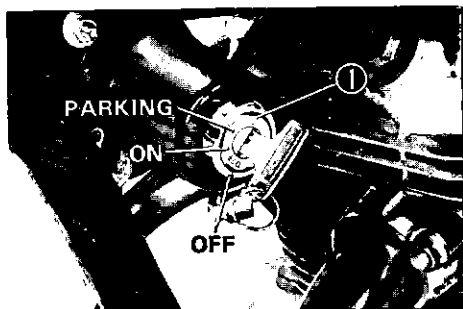

① Main switch

Key Position	Function	Key Removal
OFF	All electric circuits are open, engine cannot be started.	Key can be removed.
ON (red dot)	Electric circuits are closed, lights will operate and engine can be started.	Key cannot be removed.
PARKING (black dot)	The taillight will be on but all other circuits are open. The key should be removed when parking the motorcycle.	Key can be removed.