

Ignition Switch


The three position ignition switch ① is located on top of the right handlebar grip switch housing. In the "RUN" position the ignition circuit will be completed and engine will operate. In the "OFF" positions the ignition circuit will be open and the engine will not operate. This switch is intended primarily as a safety or emergency switch and can normally remain in the "RUN" position.

Starter Button

The starter button ② is located directly below the headlight switch ③.

When the starter button is pressed the starter motor will crank the engine.

Refer to pages 25–26 for the correct starting procedure.

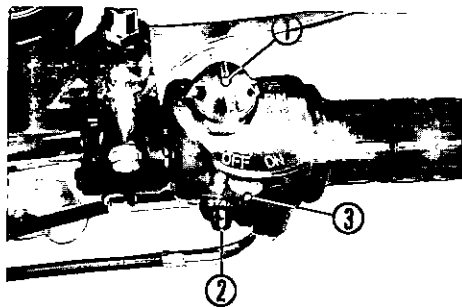

- ① Ignition switch ② Starter button
③ Headlight switch

Headlight Switch

The headlight switch ③ is located at the right handlebar grip.

When the headlight switch ③ is moved to the "OFF" position, the headlight goes out.

When the switch is moved to the "ON" position, headlight, taillight, and if in low beam two turn signal lights come on.