


## Oil Filter Maintenance


A dual system of metal screening ④ and centrifugal oil filtering ③ is utilized to provide engine components with highly purified oil to minimize wear and improve engine cooling. The oil filters are serviced in the following manner:

1. Drain the engine oil by referring to engine oil change section on page 34.

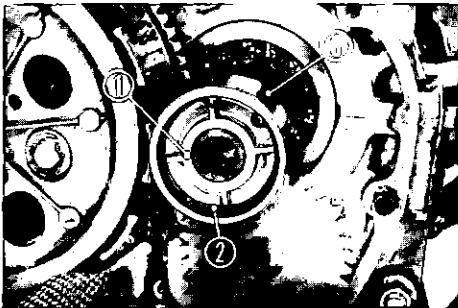

- ① Oil filter cap    ② Snap ring  
③ Oil filter rotor

2. Remove the foot rest, the muffler and the kick starter pedal.
3. Loosen the right crankcase cover mounting screws and remove the crankcase cover and cover gasket.
4. Remove the snap ring ② and disassemble the oil filter cap ① from the oil filter rotor ③.

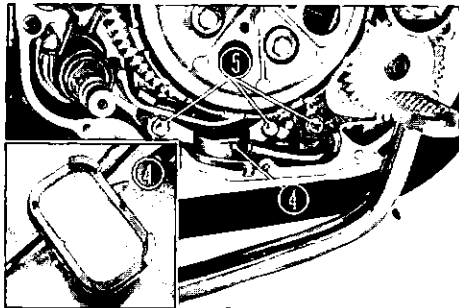

- ④ Filter screen  
⑤ Filter screen attaching bolt