


3. Retighten the tensioner bolt and lock nut.

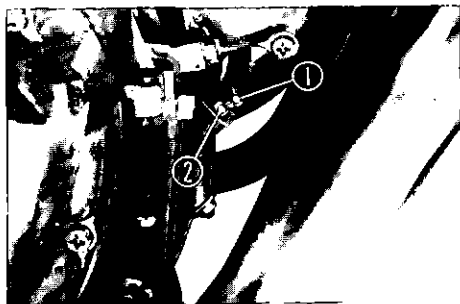


① Tensioner bolt ② Lock nut

Air Cleaner Maintenance

Air cleaner element cleaning and/or replacement intervals depend on motorcycle operating conditions. Your Honda dealer can help you to determine the frequency of cleaning or replacing the element.

1. Open the seat.
2. Remove the air cleaner cover.
3. Remove the air cleaner case ① by unscrewing the case fixing nut ②.
4. Remove the air cleaner element ③ by unscrewing the element fixing bolt ④ and connecting tube fixing screw ⑤.

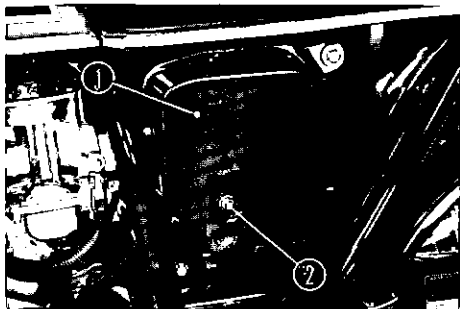

① Air cleaner case
② Case fixing nut