


5. Clean the air cleaner element by tapping it lightly to loosen dust. The remaining dust can be brushed from the outer element surface or blown away by applying compressed air from the inside of the element.

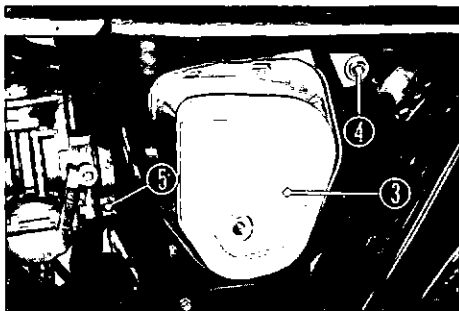


- ③ Air cleaner element
- ④ Element fixing bolt
- ⑥ Connecting tube fixing screw

Throttle Cable Adjustment

Two control cables connect the throttle grip to a crank on the carburetor operating bar. One cable opens the throttle valves, while the other cable ensures positive closure.

Standard throttle grip play is approximately 10-15° of grip rotation. This play can be adjusted at the grip play adjuster

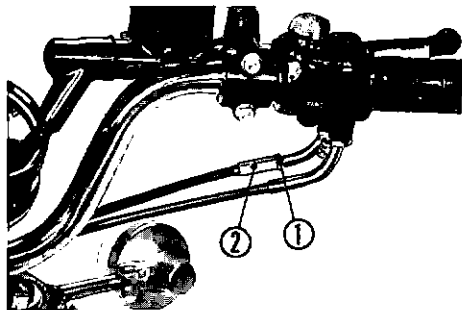

- ① Lock nut
- ② Grip play adjuster