


② (page 47) and also with the adjuster ③ at the lower end of the opening cable at the throttle crank. To adjust, loosen the lock nut and turn the adjuster. Do not forget to tighten the lock nut upon completion of adjustment.

Check for smooth operation of throttle grip through the entire range from fully open to fully closed with the steering handle set to the extreme right and left steering positions.

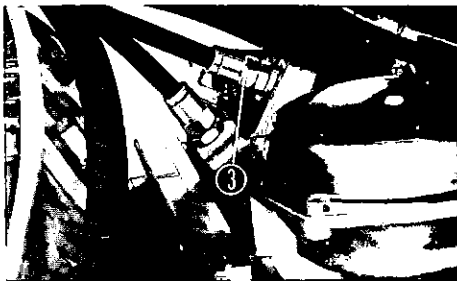

③ Adjuster

Inspect the physical condition of the throttle cable housing between the throttle grip and the carburetors for kinks, chafing, other damage or for improper routing; replace any damaged cable or reroute if required.

Carburetor Adjustment

A carburetor which is out of adjustment will adversely affect the performance of the engine; therefore, it is important that the carburetor always be maintained in perfect adjustment.

Carburetor adjustment should only be made when the engine is at operating temperature.

1. Set the idle speed to 1,200 rpm with the throttle stop screw ② (page 49). Turning the screw clockwise will increase engine speed.