



Maintenance

Please read “Importance of Maintenance” and “Maintenance Fundamentals” carefully before attempting any maintenance. Refer to “Specifications” for service data.

Importance of Maintenance	P.30	Side Stand	P.58
Maintenance Schedule	P.31	Drive Chain	P.59
Maintenance Fundamentals	P.34	Clutch	P.63
Tool kit	P.44	Throttle	P.66
Removing & Installing Body		Crankcase Breather	P.67
Components	P.45	Other Adjustments	P.68
Seat	P.45	Brake Lever	P.68
Side Covers	P.46	Front Suspension	P.69
Battery	P.47	Rear Suspension	P.70
Engine Oil	P.49	Headlight Aim	P.71
Coolant	P.53	Brakelight Switch	P.71
Brakes	P.55		