



Maintenance Schedule

Items	Frequency	Odometer Reading *1							Refer to page	
		× 1,000 km	1	6	12	18	24	30		36
		× 1,000 mi	0.6	4	8	12	16	20		24
		Month		6	12	18	24	30	36	
Fuel Line					I		I		I	-
Throttle Operation					I		I		I	66
Air Cleaner *2						R			R	-
Crankcase Breather *3				C	C	C	C	C	C	67
Spark Plug					I		R		I	-
Valve Clearance							I			-
Engine Oil			R		R		R		R	49
Engine Oil Filter			R		R		R		R	51
Radiator Coolant *4					I		I		R	53
Cooling System					I		I		I	-
Secondary Air Supply System					I		I		I	-

Maintenance Level

: Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Shop Manual.

: Technical. In the interest of safety, have your motorcycle serviced by your dealer.

Maintenance Legend

I : Inspect (clean, adjust, lubricate, or replace, if necessary)
C : Clean
L : Lubricate
R : Replace