



Removing & Installing Body Components ► Side Covers

Side Covers

The right side cover must be removed to access the coolant reserve tank.
The left side cover must be removed for fuse maintenance.

The right and left side covers can be removed in the same manner.

Removal

1. Remove the seat. ►P.45
2. Remove the bolt.
3. Remove the prongs from the grommets.

Installation

1. Insert the prongs into the grommets.
2. Install the bolt.
3. Install the seat properly.

