



5. Check rear axle alignment by making sure the scales on the drive chain adjusters align with the index marks on both sides of the swingarm. Both scales should correspond. If the axle is misaligned, turn the right or left adjusting bolt until the scales are aligned and recheck chain slack.

Drive Chain ► Adjusting the Drive Chain Slack

6. Tighten the rear axle nut.

Torque: 88 N·m (9.0 kgf·m, 65 lbf·ft).

7. Tighten the adjusting bolts lightly.
8. Recheck drive chain slack.

If a torque wrench was not used for installation, see your dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.