

Electrical Trouble ► Blown Fuse

(CB400A)


Under seat

1. Remove the seat. ►P.45
2. Open the fuse box cover.
3. Pull out the fuses one by one to check for a blown fuse. Always replace a blown fuse with a spare of the same rating.
4. Close the fuse box cover.
5. Install the seat.

Beside left rear suspension

1. Remove the left side cover. ►P.46
2. Open the fuse box covers.
3. Pull out the fuses one by one to check for a blown fuse. Always replace a blown fuse with a spare of the same rating.
4. Close the fuse box covers.
5. Install the left side cover.

Under seat

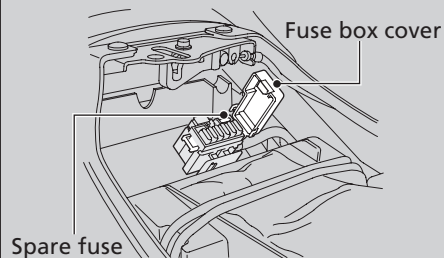

Beside left rear suspension

