

Parts Location

Operation Guide

Rear brake fluid reservoir ➡ P.70

Battery ➡ P.63

Fuse box ➡ P.102

Main fuse ➡ P.103

Engine oil fill cap ➡ P.64

Front brake fluid reservoir
➡ P.70

Front brake lever

Throttle grip ➡ P.80

Engine oil filter ➡ P.66

Engine oil level inspection
window ➡ P.64

Rear brake pedal