


Instruments (Continued)

4 HISS indicator setting:

You can select the blink or off the HISS indicator.

- 1 Press SEL button to select "On" (blinks) or "OFF" (off).

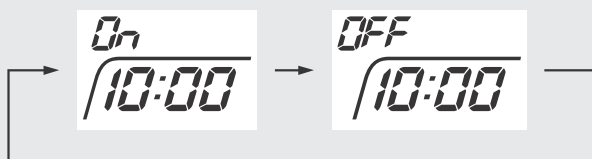

- 2 **Except E, II E type**

Press SET button. The HISS indicator setting is set, and then the display moves to the changing of the fuel mileage meter unit.

E, II E type only

Press SET button. The HISS indicator is set, and then the display moves to the changing of the speed and mileage unit.

5 Changing the speed and mileage unit:

E, II E type only

- 1 Press SEL button to select either "km/h" and "km" or "mph" and "mile".



- 2 Press SET button. The speed and mileage unit is set, and then the display moves to the changing of the fuel mileage meter unit.