

# Troubleshooting

<b>Engine Will Not Start (HISS indicator stays on) .....</b>	P. 85
<b>Overheating (High coolant temperature indicator is on).....</b>	P. 86
<b>Warning Indicators On or Flashing .....</b>	P. 87
Low Oil Pressure Indicator.....	P. 87
PGM-FI (Programmed Fuel Injection) Malfunction Indicator Lamp (MIL) .....	P. 87
ABS (Anti-lock Brake System) Indicator (CB500FA only).....	P. 88

<b>Other Warning Indication .....</b>	P. 89
Fuel Gauge Failure Indication .....	P. 89
<b>Tyre Puncture .....</b>	P. 90
<b>Electrical Trouble .....</b>	P. 97
Battery Goes Dead .....	P. 97
Burned-out Light Bulb .....	P. 97
Blown Fuse .....	P. 102