


Electrical Trouble ▶ Burned-out Light Bulb


Position Light Bulb

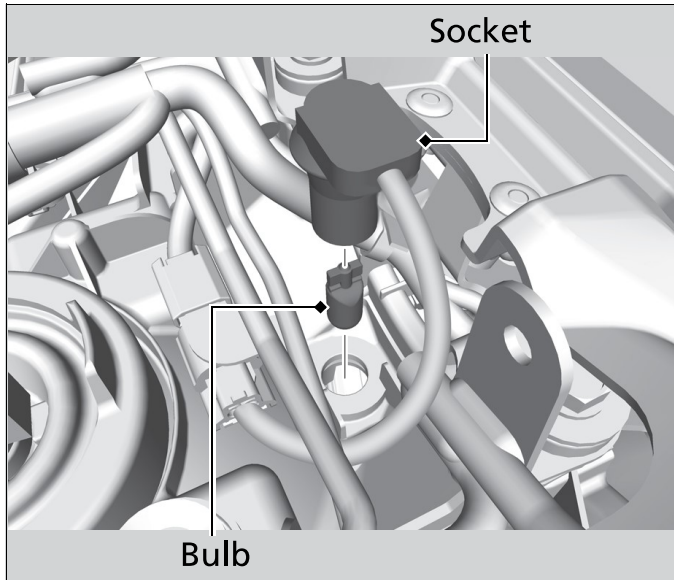

1. Remove the headlight assembly. ➡ P. 61
2. Pull off the socket without turning.
3. Pull out the bulb without turning.
4. Install a new bulb and parts in the reverse order of removal.

Brake/Tail Light Bulb

1. Remove the bolts and rear fender cover.

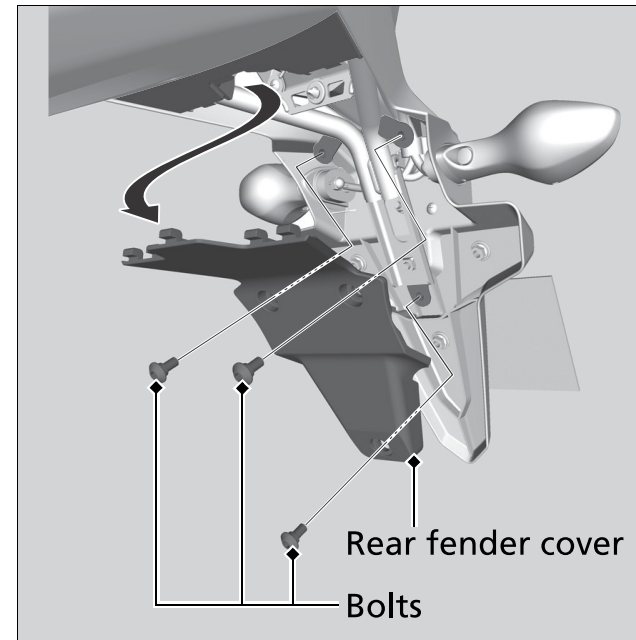

Troubleshooting

continued 99