

Speedometer

Tachometer

NOTICE


Do not operate the engine in the tachometer red zone. Excessive engine speed can adversely affect engine life.

Tachometer red zone
(excessive engine rpm range)

Clock (12-hour display)
To set the clock: ➡ P. 25

Fuel gauge

Remaining fuel when only 1st (E) segment starts flashing:
approximately 2.8 litres (0.74 US gal, 0.62 Imp gal)

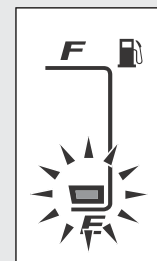

If the fuel gauge indicators repeat flashing or turned off: ➡ P. 87