

# Maintenance

Please read “Importance of Maintenance” and “Maintenance Fundamentals” carefully before attempting any maintenance. Refer to “Specifications” for service data.

<b>Importance of Maintenance</b> .....	P. 40	<b>Brakes</b> .....	P. 66
<b>Maintenance Schedule</b> .....	P. 41	<b>Side Stand</b> .....	P. 68
<b>Maintenance Fundamentals</b> .....	P. 44	<b>Drive Chain</b> .....	P. 69
<b>Tool Kit</b> .....	P. 55	<b>Clutch</b> .....	P. 73
<b>Removing &amp; Installing Body Components</b> ....	P. 56	<b>Throttle</b> .....	P. 76
Seat .....	P. 56	<b>Crankcase Breather</b> .....	P. 77
Side Cover .....	P. 57	<b>Other Adjustments</b> .....	P. 78
Bulb Lid .....	P. 58	Rear Suspension .....	P. 78
Clip.....	P. 58	Headlight Aim .....	P. 79
Battery.....	P. 59	Brakelight Switch .....	P. 79
<b>Engine Oil</b> .....	P. 60	Windscreen Height.....	P. 80
<b>Coolant</b> .....	P. 64		