

(Ref.No.) Description	Function
(1) Speedometer	Shows riding speed.
(2) Tachometer	Shows engine rpm.
(3) Tachometer red zone	Never allow the tachometer needle to enter the red zone, even after the engine has been broken in. CAUTION: * Running the engine beyond recommended maximum engine speed (the beginning of the tachometer red zone) can damage the engine.
(4) Coolant temperature gauge	Shows coolant temperature(see page 17).
(5) Right turn signal indicator	Flashes when the right turn signal operates.
(6) Neutral indicator (green)	Lights when the transmission is in neutral.