

**Tachometer**

**NOTICE**  
Do not operate the engine in the tachometer red zone. Excessive engine speed can adversely affect engine life.

**Speedometer**


**Fuel gauge**

Remaining fuel when only 1st (E) segment starts flashing:  
approximately 4.0 litres (1.1 US gal, 0.9 Imp gal)



At the same time, the display switches to the reserve fuel consumption. ➔ P.25

**If the fuel gauge indicators repeat flashing or turned off: ➔ P.87**

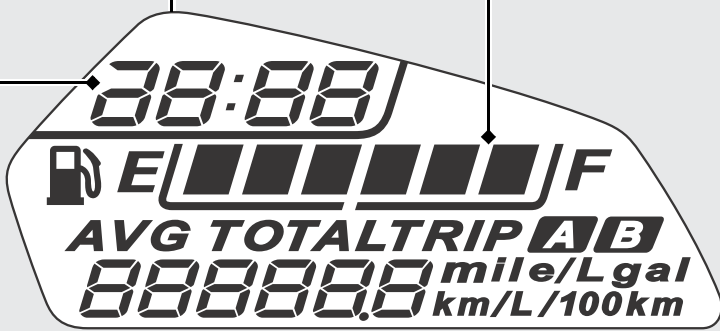

**Clock (12-hour or 24-hour display)**

To set the clock: ➔ P.26