The average fuel mileage and fuel consumption will be based on tripmeter A.

- Current fuel mileage: Current instant fuel mileage. If your speed is less than 7 km/h (5 mph), "---" is displayed. When "--" is displayed at speeds above 7 km/h (5 mph), go to your dealer for service.
- Average fuel mileage: Average fuel mileage since tripmeter A was reset. When "---" is displayed, go to your dealer for service.
- Fuel consumption: Total fuel consumption since tripmeter A was reset. When "---" is displayed, go to your dealer for service.
- Reserve fuel consumption: If the engine stop switch is in the \bigotimes (Off) position, "---" is displayed. When "---" is displayed in other cases, go to your dealer for service.
 - ► To reset the average fuel mileage and fuel consumption: ► P. 24