

Ref. No.	Description	Function
1	Speedometer	Indicates driving speed.
2	Odometer	Indicates total accumulated distance traveled.
3	Oil pressure warning light (red)	<p>After turning on the ignition switch but before starting engine, check to make sure the oil pressure warning light is functioning (light comes on).</p> <p>The oil pressure warning light; it goes off when the engine is started and the prescribed engine oil pressure reached. Should the light come on while driving, it is an indication of a malfunction in the lubricating system, in which case, the motorcycle must be stopped at once, the engine turned off, and the engine oil level checked. If the check reveals that the engine oil level is within the prescribed limits, the cause of the malfunction will have to be determined and corrected by contacting the nearest HONDA dealer. However, an occasional flickering of the warning light at or near idling speeds when the engine is at operating temperature, is of no concern since low oil pressure is normal at low-speed.</p>