


## Ignition Switch

The ignition switch (1) is located directly below the indicator panel.

Functions of the respective switch positions are shown in the chart below.

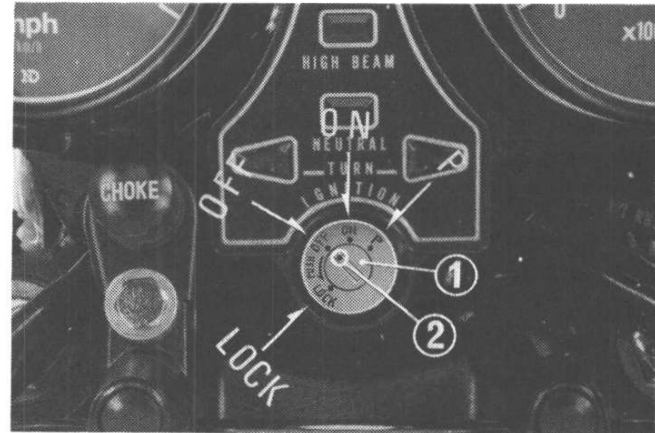

- (1) Ignition switch  
(2) Index mark

Switch Position	Function	Key Removal
OFF	All electric circuits are open, engine cannot be started.	Key can be removed.
ON	Electric circuits are closed, headlight, taillight, position lights and meter lights will be on and other lights can operate, and engine can be started.	Key cannot be removed.
P (PARKING)	The taillight will be on but all other circuits are open. The key should be removed when parking the motorcycle.	Key can be removed.
LOCK (STEERING LOCK)	The steering can be locked. All electric circuits are open, engine cannot be started. Refer to the section "STEERING LOCK" for operation (page 16.)	Key can be removed.