

WARNING:

Do not attempt to turn the key to the "LOCK" position while the motorcycle is in motion.


Seat Lock and Helmet Holder

The seat lock (1) is located on the lower right side of the seat. Insert the ignition switch key and turn it counterclockwise 90° to unlock and open the seat.

The helmet holders (2) are located under the seat. Open the seat, hang the helmet "D" ring on a hook and lock the seat.

WARNING:

- * The seat is a double lock type. Make sure that the seat is locked by pushing it down.
- * The helmet holder is designed for helmet security while parking. Do not operate the motorcycle with a helmet attached to the holder as the helmet may interfere with the rear wheel causing damage to the helmet and possible stoppage of the wheel.

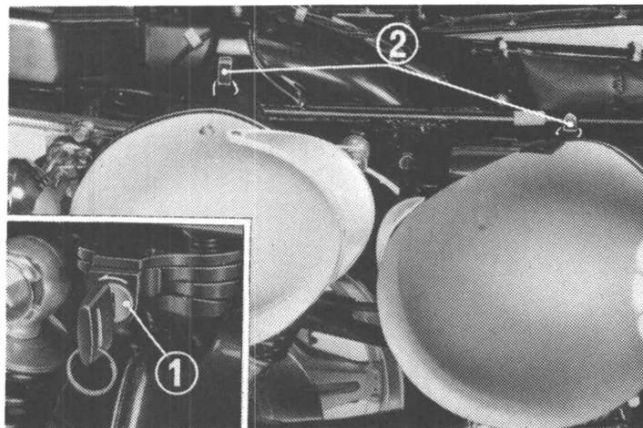

(1) Seat lock (2) Helmet holders