

MAINTENANCE SCHEDULE	INITIAL SERVICE PERIOD	REGULAR SERVICE PERIOD Perform at every indicated month or mileage interval, whichever occurs first.				
	Month	—	1	3	6	12
	Mile	500	500	1,500	3,000	6,000
	Km	1,000	1,000	2,500	5,000	10,000
BRAKE FLUID LEVEL	I				I	
*BRAKE FLUID		R (24 months or 20,000 km/12,000 miles)				
*BRAKE SHOES/PADS					I	
BRAKE CONTROL LINKAGE	I				I	
*WHEEL RIMS AND SPOKES	I				I	
TIRES	I				I	
FRONT FORK OIL	**R					R
FRONT AND REAR SUSPENSIONS	I				I	
REAR FORK BUSHING					I & L	
*STEERING HEAD BEARINGS						I
BATTERY	I			I		
LIGHTING EQUIPMENT	I				I	
*SIDE STAND					I	
NUTS, BOLTS (TIGHTEN)	I				I	

Items marked * should be serviced by an authorized Honda dealer, unless the owner has proper tools and is mechanically proficient. Other maintenance items may be serviced by the owner.

** Initial service period 2,500 Km (1,500 miles).