



the proper level. Further, the oil should be changed and the oil filter element replaced at the maintenance intervals shown on page 37. Perform the engine oil change in the following manner.

Drain the oil while the engine is still warm to assure complete and rapid draining.

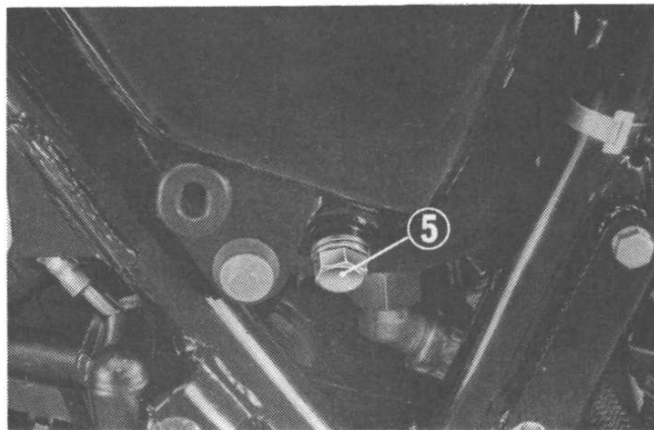

(5) Oil tank drain plug

1. Remove the right side cover.
2. Place an oil drain pan (1 gal.) under the oil tank to catch the oil. Remove the drain plug (5) with a 17 mm wrench and drain the oil. Place another oil drain pan under the crankcase, remove the crankcase drain plug (6) with a 17 mm box wrench and drain the oil. Also remove the oil filter cover (7) and the filter element.

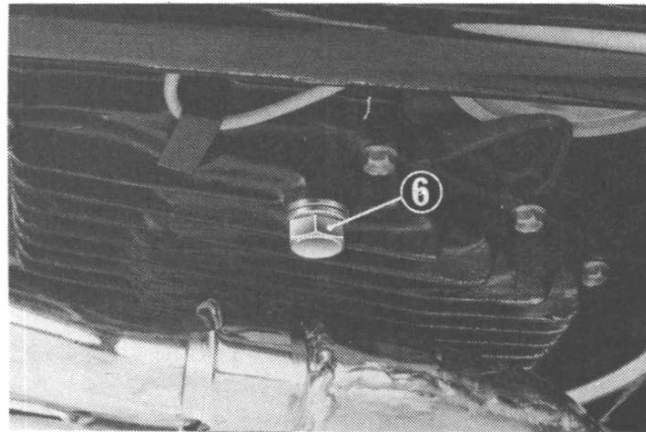

(6) Crankcase drain plug