

### WARNING:


Check the fuel tank over flow tube for clogging, bending and cracking.

### CAUTION:

- \* Do not overtighten these terminal connections as damage to the battery terminals may result.
- \* When installing the battery, route the battery breather tube as shown in the figure and be careful not to bend or twist the breather tube. A bent or kinked breather tube may pressurize the battery and damage its case.

### NOTE:

Apply petroleum jelly to the battery terminals to retard corrosion.

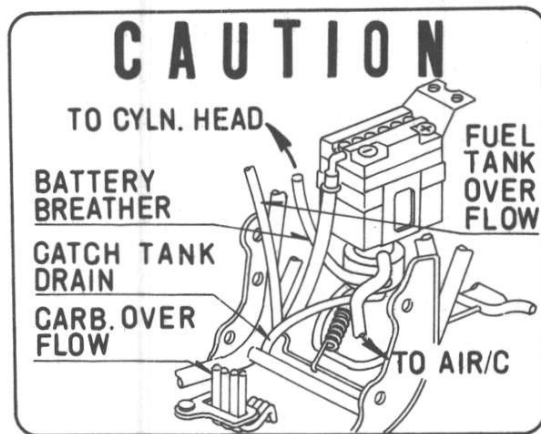

### Battery charging

Should the battery electrolyte specific gravity reading (measured with a hydrometer) drop below 1.200 @ 68°F (20°C), the battery should be changed at a rate not to exceed 1.2 amps until the specific gravity reading is between 1.260 and 1.280 @ 68°F (20°C).

### WARNING:

Charge the battery in a well-ventilated area. Remove the filler caps and make sure the charger is connected properly to the battery before charging.