


Headlight Bulb Replacement


When exchanging the light bulbs, always replace the bulb with one of the specified type and rating. This is important to prevent the electrical lighting circuit from malfunctioning.

1. Remove holding screws (1) and headlight unit from the case.
2. Disconnect the socket (2) from the unit.

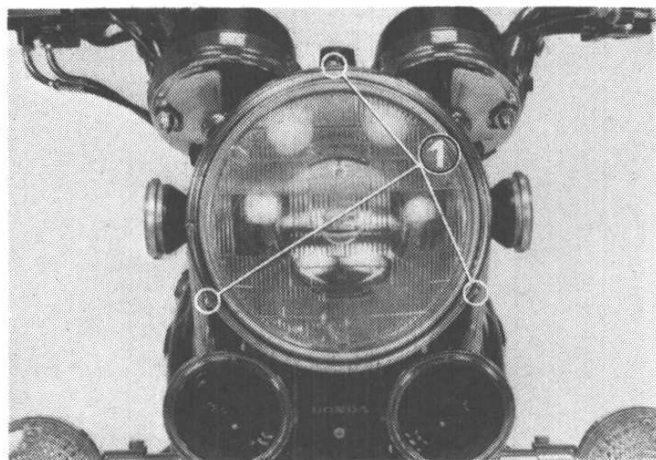

(1) Holding screws

3. Remove the upper and lower retaining lock pins (3), screws (4) and horizontal adjusting screw (5) from the rim.
4. Remove the two sealed beam unit retaining screws (6).
5. Install a new sealed beam unit. Assemble by reversing the procedure described above.

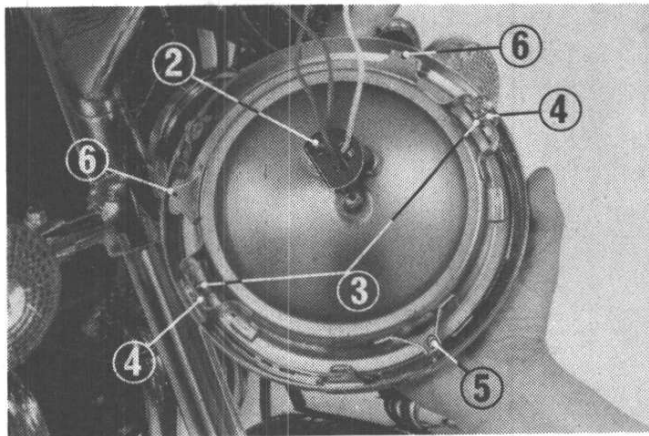

(2) Socket

(3) Lock pins

(4) Lock screws

(5) Horizontal adjusting screw

(6) Sealed beam unit retaining screws