


### Installation Notes:

Position the front wheel between the fork legs and insert the axle from the left side, through the left fork leg and wheel hub.

### **CAUTION:**

**\* When installing the wheel carefully, fit the left brake disc between the brake pads to avoid damaging the pads.**

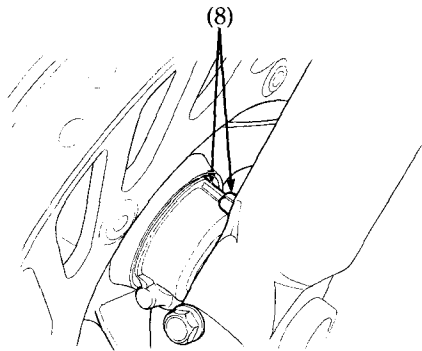

(8) Lugs

Position the lug on the speedometer gear box against the lug (8) on the left fork leg. Tighten the axle bolt to the specified torque .

Front axle torque :

60 N·m (6.0 kg-m , 43 lb-ft)

Fit the caliper over the disc, taking care not to damage the brake pads. Install the caliper fixing bolts, and tighten to a torque of :

31 N·m (3.1 kg-m , 22 lb-ft)