


■ ELECTRICAL CONTROLS

● Main Key Switch

The main key switch ① is located on the left side under the forward end of the fuel tank. Functions are shown in the chart below.

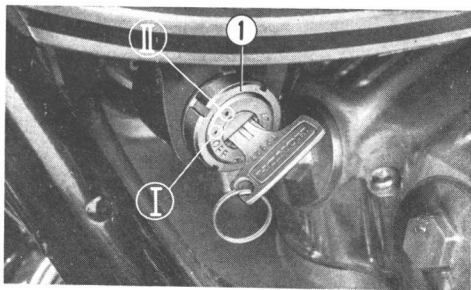

① Main key switch

Key Position	Function	Key Removal
OFF	Electric circuit is open, engine will not start and all lights will not operate.	Key can be removed.
I (ON)	Electric circuit is completed, lights will operate and engine can be started.	Key can not be removed.
II (Parking)	Electric circuit is open, however, the tail light will be lighted. The key should be removed when parking the motorcycle.	Key can be removed.