


● Throttle (Control) Grip

Throttle control is the right handle bar grip ②. Twisting the throttle grip inward ④ opens the throttle and increases the engine rpm; twisting the grip outward ⑤ will close the throttle. As the throttle grip is closed all the way, a resistance will be felt. At this point the engine

speed should drop to idling (950 rpm); if not, twist grip further into the overriding stroke. If the engine does not drop to the idle speed, the throttle control should be adjusted by referring to the section on THROTTLE CABLE and CARBURETOR ADJUSTMENT on page 43 to 44.

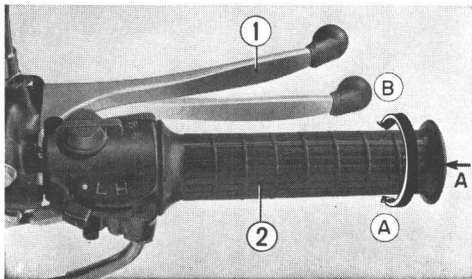

① Front brake lever

② Throttle grip

