


ing nut ②, in either direction. Turning the nut clockwise will increase the free travel, and vice versa.

The stop bolt ③ is provided to make a adjustment of the pedal height before the adjustment by the nut. To turn this bolt, loosen the lock nut. Upon adjusting, tighten the lock nut.

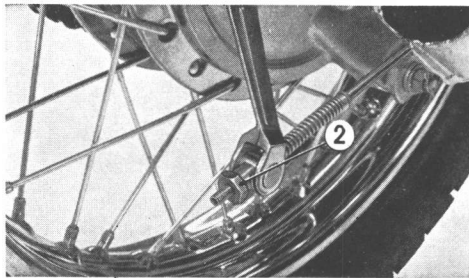

② Rear brake adjusting nut

7. Rear Brake Shoes

Examine the brake shoes for lining thickness and evenness of wear at specified intervals as in the MAINTENANCE SCHEDULE (page 29). To examine the brake shoes, remove the rear wheels according to the instruction on page 62. Replace brake shoes with only HONDA genuine replacement brake shoes when thickness of lining becomes **0.08 in. (2.0 mm)**.

NOTE: When service is necessary on the brakes consult your HONDA dealer.