

CAUTIONS: 1) Never use any conductive material as a fuse nor a fuse of different rating. Remember that a failure to this precaution will result in serious damage to the electrical system of your motorcycle.


2) Be sure to supply spare fuses after the existing fuses are used for replacement.

● Head Light Beam Adjustment

The headlight must be properly adjusted for safe night driving. This motorcycle has provisions to adjust the headlight in the vertical and also horizontal directions.

a. The vertical adjustment is made by loosening the bolts ① which mount the headlight assembly. The headlight is normally adjusted in the vertical direction so that the center of the beam intersects the ground at the point **165 feet (50 m)** in front of the motorcycle in the riding attitude.

b. The horizontal beam adjustment is made with the adjusting screw ② located on the left side of the headlight when facing the motorcycle. Turning the screw in will focus the beam toward the left side of the rider and turning the screw out will focus the beam toward the right side. Adjust the beam to coincide with the center line of the motorcycle

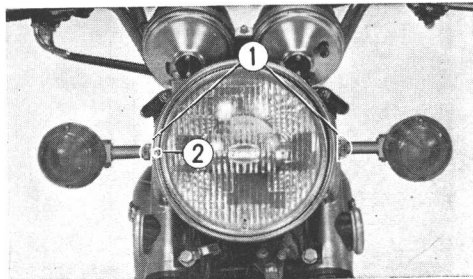

① Headlight mounting bolts
② Adjusting screw