

Ref. No.	Description	Function and Operating Method
1.	Tachometer	Indicates engine RPM.
1-a.	Tachometer RED ZONE	Indicates critical engine operating range. To avoid over-stressing engine components the tachometer needle must NEVER be permitted to enter the RED ZONE.
2.	Speedometer	Indicates driving speed.
3.	Odometer	Indicates total accumulated distance traveled.
4.	Trip-meter	Indicates distance traveled (meter can be reset for each trip).
4-a.	Trip-meter reset knob	Reset the trip-meter to zero (0) by turning the trip-meter reset knob in the direction of the arrow.
5.	High beam indicator lamp (blue)	Lamp will be on when headlight is on high beam. (Refer to page 14)
6.	Turn signal indicator lamp (amber)	Lamp will flash when either turn signal light is operating. (Refer to page 14).