


● Steering Lock


This steering lock ① is located on the steering stem directly below the headlight case. Turn the handlebar all the way to the steering stop, either to the left or right. Insert the key into the lock, turn key 60° to the left and press in. Turn the lock to the original position and remove the key. This locks steering to help prevent theft.

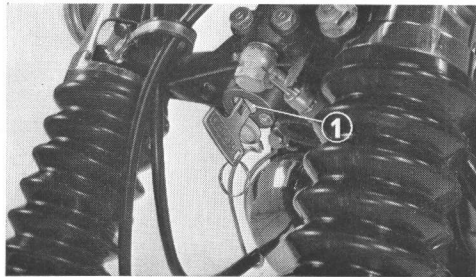

① Steering lock

● Seat Lock

The seat lock ① is located at the left center under the seat. To raise the seat insert the key into the lock and turn it counter-clockwise. The document compartment ② is built in the seat and its lid is accessible by raising the seat.

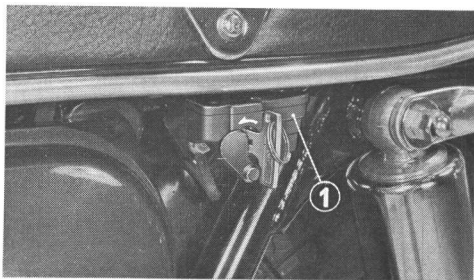

① Seat lock