


● Kick Starter Pedal

The kick starter pedal located at the right side of the engine can be used to start the engine in event the battery charge is too low to crank the engine with the electric starter. Operate the kick starter pedal with the right foot, starting from the top of the stroke and following through with a rapid and continuous motion.

CAUTION: Do not allow the kick starter pedal to snap back freely against the pedal stop.

● Choke Lever

The choke lever ① is located at the left side of the engine on the left cylinder carburetor. When the choke lever is down ④ (normal driving position), the chokes are fully open. When the choke lever is up ⑤, the chokes are fully closed (Cold Engine Starting Position).

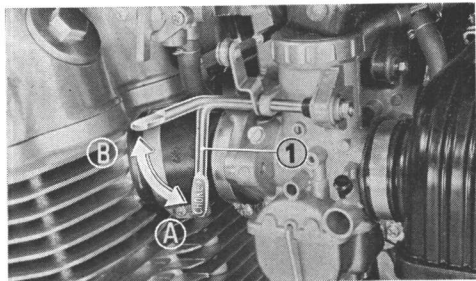

① Choke lever