

7. Lighting System. (page 12~14, 79~83)
8. Battery Electrolyte. (page 75)
9. Drive Chain. (page 54)
10. Throttle Operation. (page 49)
11. Clutch Operation. (page 52)
12. Visually check the security of all controls, axles, suspension and steering components.

■ STARTING THE ENGINE

● Cold Engine Starting Procedure

NOTE: The electrical system of the CB750 is designed to prevent electric starting if the transmission is in gear, unless the clutch is disengaged. However, it is recommended that the transmission be placed in neutral before attempting to start the engine.

1. Turn the fuel tank valve to the "ON" position.
2. Insert the key into the ignition switch and turn to the "ON" position. At this time, observe the GREEN neutral indicator lamp. The lamp will be on when the transmission is in the neutral position. Also at this time the RED oil pressure warning lamp should be on. If the lamp fails to come on, the connection should be checked for an open circuit and the bulb checked and replaced, if it has failed.
3. Make sure that the engine stop switch