

FINAL DRIVE OIL

Oil Level Check


Check the final drive oil level when specified by the maintenance schedule (page 45).

1. Place the motorcycle on its center stand on level ground.
2. Remove the oil filler cap (1).
3. Check that the oil reaches a level between the two bosses (A) on the inner housing (visible below the lower edge of the inspection hole).

NOTE:

- * If the level is low, check for leaks. Pour fresh oil through the inspection hole until it reaches a level between the two bosses (A) on the inner housing (visible below the lower edge of the inspection hole).

Recommended oil:
HYPOID GEAR OIL
SAE 80

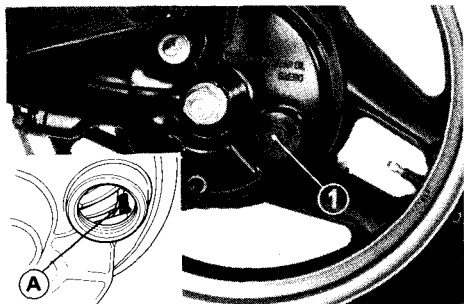

(1) Oil filler cap

(A) Two bosses